



M50/7 AIR PISTOL
USER'S MANUAL

Bin Tac LLC
<https://www.bintacllc.com>

⚠ WARNING READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING BINTAC PRODUCTS

This air rifle is not a toy and carelessness use may result in serious injury or accidental death.

This airgun is recommended for adult use or under adult supervision.

Never attempt to disassemble this rifle without manufacturer authority.

Never fire the rifle when it is out of air or when air cylinder is removed!

Use lead pellets only, The use of any projectile other than a lead pellet is unauthorized and will void the manufacturers warranty.

Bintac airguns are designed for Use with dry-filtered, compressed air to fill the air cylinder.

NEVER use other gases such as oxygen, acetylene, hydrogen, etc.

Never fill this air rifle air cylinder above 310 BAR /4500 PSI (working pressure) unless stated for the specific model. The resulting damage caused by overcharging the air cylinder is not covered by the manufacturers warranty.

ALWAYS wear eye and ear protection when using an airgun.

ALWAYS point the air rifle in a safe direction and be aware of the backstop.

NEVER point an air rifle at anything you do not intend to shoot.

ALWAYS make sure that each pellet you use is in the proper caliber for the air gun and never re-use pellets.

NEVER leave the air gun loaded if it is not going to be used.

Keep your fingers away from the trigger and do not load the rifle until you are ready to fire.

Anytime you transport an airgun, make sure the safety is on and the gun is unloaded.

Store the airgun (unloaded) and ammunition in separate, safe places, out of reach of children.

Users should follow all local laws regarding airgun ownership and use.

We recommended that you have the air cylinder visually inspected every 3 years.

**FAILURE TO OBSERVE THE ABOVE WARNINGS
CAN RESULT IN DAMAGE TO YOUR AIR RIFLE,
ACCIDENTAL DEATH OR SERIOUS INJURY.
PRACTICE GUN SAFETY AND RESPONSIBILITY.**


BINTAC M50/7 AIR PISTOL

READ ALL INSTRUCTIONS AND WARNINGS BEFORE USING THIS AIRGUN



SPECIFICATION

Caliber	.45 CAL
	.50 CAL
Weight	5.4 LBS
Barrel Length	13 Inches
Overall Length	31 Inches
Butt-Stock Folded Length	20 Inches
Cocking System	Bolt Action
Magazine Capacity	.45 CAL 6 Shots
	.50 CAL 6 Shots
Air Tube Capacity	300CC
Max Air Filling Pressure	4500 PSI
Muzzle Energy	.45 CAL UP TO 260 FPE
	.50 CAL UP TO 300 FPE
Shots per Fill	.45 CAL 4+ Good Shots
	.50 CAL 4+ Good Shots
Optics	11mm Dovetail Scope Mount

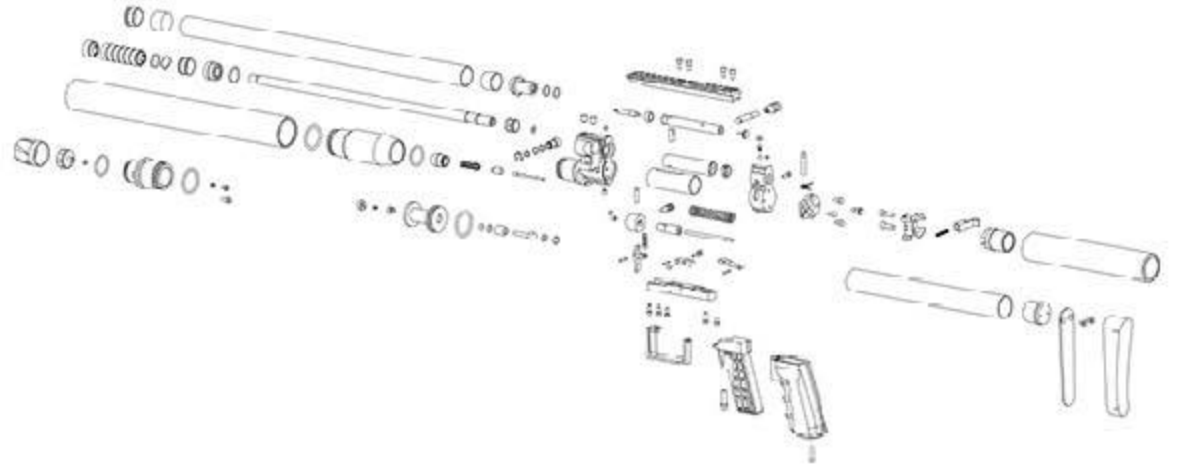

FAILURE TO OBSERVE THE WARNINGS & CAUTIONS CAN RESULT IN DAMAGE TO YOUR AIR RIFLE, ACCIDENTAL DEATH OR SERIOUS INJURY.


THE SAFE USE AND STORAGE IS THE OWNER/USER'S RESPONSIBILITY.

Butt-Stock Assemble



Take out the butt-stock and screw on the butt-stock adaptor.

Rotate the butt-stock in the comfortable position so that the butt-stock matches your shooting position.

Then rotate the lock-ring tightly in order to lock butt-stock.

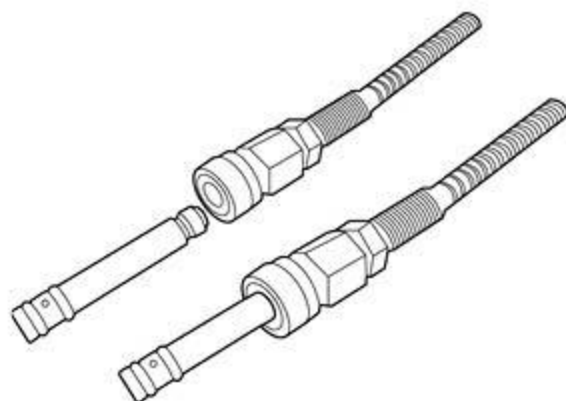

it). When the air fill is complete, close the recharging devices valves. To disconnect the cylinder from the air filling devices, open the bleed screw. This allows high pressure airs inside the refill clamp to exhaust, making it possible to pull out the 8mm fill prob from air filling hole.

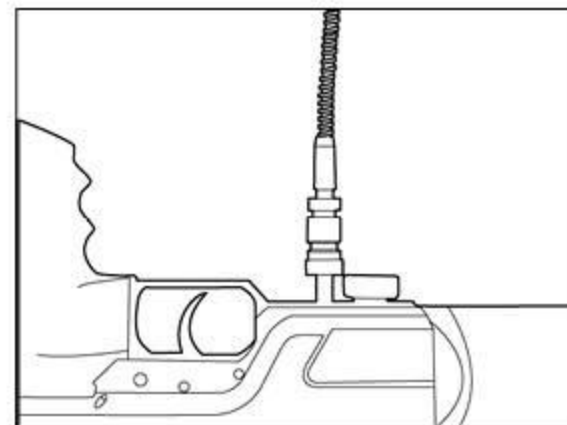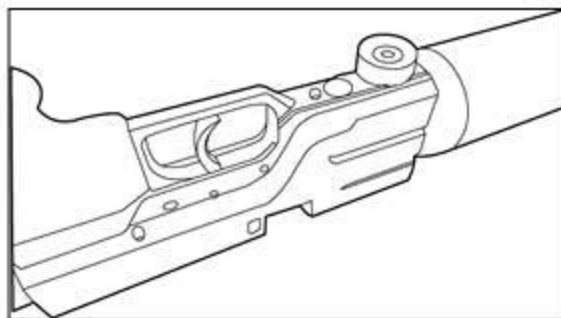

Air Filling

1. Insert 8mm air fill probe into your air filling devices (such as high pressure air compressor, scuba air tanks, hand pump or recharging station) hose connector.

⚠ Notice BEFORE FILLING, SECURE THAT DEVICES HOSE AND THE FILL PROBE CONNECTING TIGHTLY.


2. Insert the 8mm fill probe into the air filling hole under the chassis vertically.
3. Close the bleed screw on your recharging devices, open the recharging devices valve very slowly. When recharging you must watch the gun's air tube gauge and the air filling devices air gauge carefully. Never exceed 310 bar / 4500psi (unless the model allows

⚠ WARNING BINTAC AIRGUNS ARE DESIGNED FOR USE WITH DRY-FILTERED, COMPRESSED AIR ONLY. NEVER USE OTHER GASES SUCH AS OXYGEN, ACETYLENE, HYDROGEN, ETO. NEVER FILL THE AIR CYLINDER ABOVE 310 BAR / 4500 PSI UNLESS MODEL SPECIFIED. THE RESULTING DAMAGE CAUSED BY OVERCHARGING THE AIR CYLINDER OR AIR TANK IS NOT COVERED BY THE MANUFACTURER'S WARRANTY.

Loading the Magazine

Spring Tension Magazine Removal: Pull the cocking handle and keep the bolt handle on the rear position.

Remove the magazine from the slot then hold the bolt handle and pull the trigger while holding the cocking handle in order to de-cock the hammer.

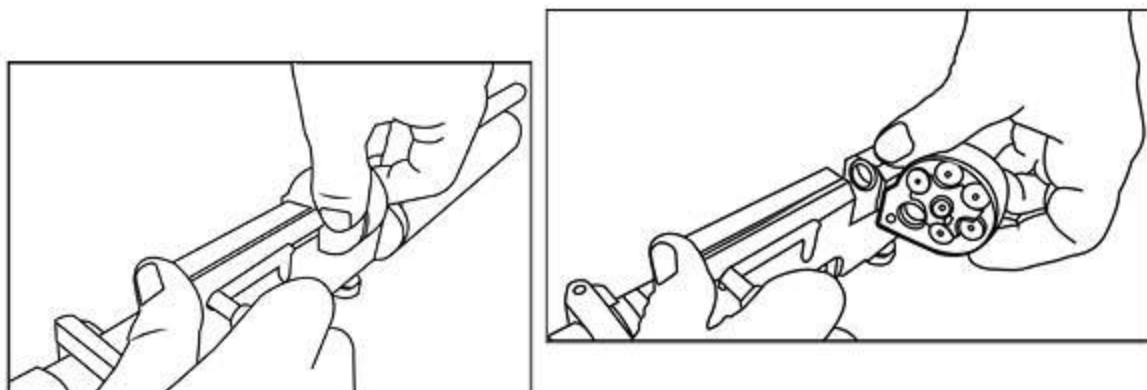


Loading pellets & Magazine

⚠ WARNING LEAD PELLETS SHOOT ONLY. THE USE OF ANY PROJECTILE OTHER THAN A LEAD PELLET IS UNAUTHORIZED AND WILL VOID THE MANUFACTURER'S WARRANTY. ALWAYS MAKE SURE THAT EACH PELLET YOU USE IS THE PROPER CALIBER FOR THE AIRGUN AND NEVER RE-USE PELLETS.

ROTATE THE MAGAZINE'S COVER IN COUNTER CLOCKWISE DIRECTION. DON'T ROTATE IN THE WRONG DIRECTION OR YOU WILL DAMAGE THE MAGAZINE'S SPRING TENSION. USER ABUSE WILL VOID MANUFACTURER'S WARRANTY AUTOMATICALLY. LOAD PELLETS BY PUSHING THE TRANSPARENT COVER COUNTER CLOCKWISE UNTIL THE COVER STOPS. KEEP THE COVER OPEN IN THE END POSITION.

Load pellets by pushing the transparent cover counter clockwise until the cover stops. Keep the cover open in the end position. (Step 1)

Step 1

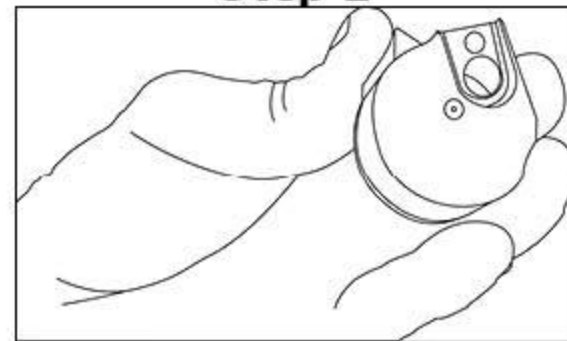

Put one pellet in the open slot from the opposite end of the magazine, the head of the pellet shall be pointing out of the hole. (Step 2 and Step 3)

Step 2




Step 3




The back of the pellet should now be seen through the transparent cover. (Step 4) This pellet will lock magazine spring.

Step 4

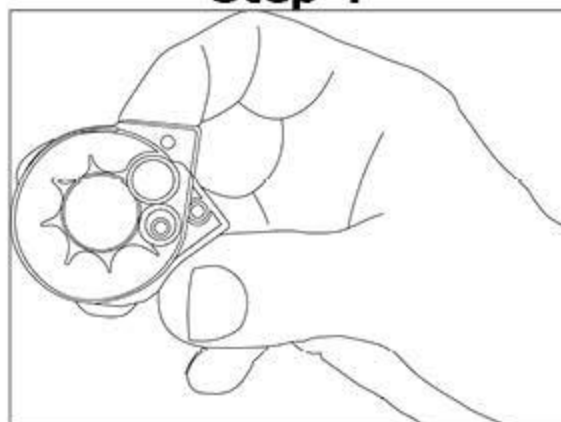


Now turn the magazine so that the transparent cover is facing you. Turn the cover clockwise one slot at the time and fill in remaining pellets from the transparent cover. Lock the transparent cover at starting position. (Step 5 and Step 6)

Step 5

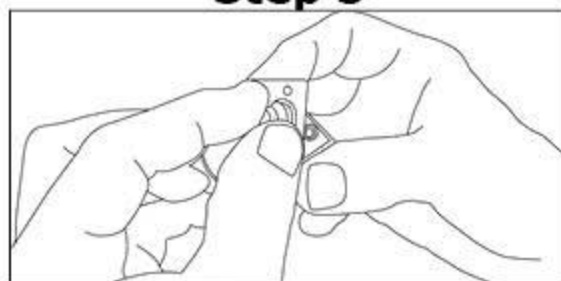



Step 6

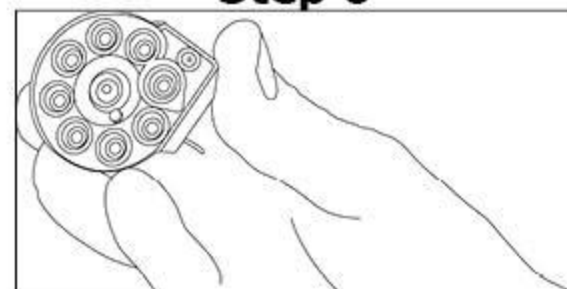

Loading the Magazine

Pull the cocking handle to its rear position. Insert the full loaded magazine into the slot.

⚠ WARNING POINTED IN A SAFE DIRECTION ALL THE TIME AND MAKE SURE THE AIR RIFLE IS UNLOADED.

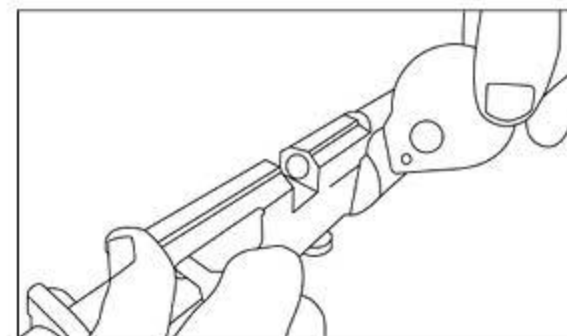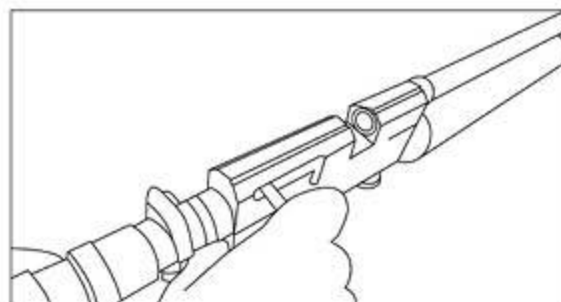


Cocking, Discharging, Loading and Firing

Before loading the airgun make sure the safety is in the On Safe position and the muzzle is pointed in a safe direction all the time.

Manually move the safety to the on safe position by switching safety lever back toward trigger.

To cock the air rifle, pull the bolt handle until the bolt is held in the cocked position.

After cocking, push the cocking handle forward in order to push the pellets into the chamber.

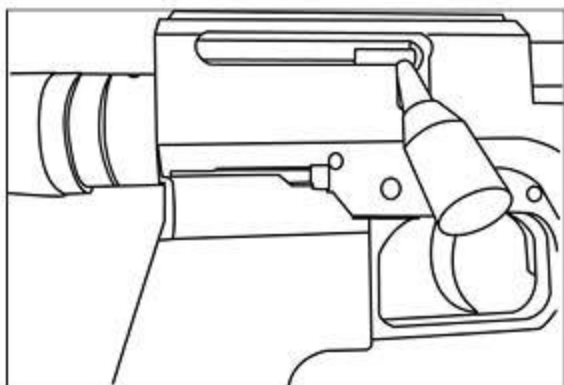

To fire, take your target, aim, switch the safety to the fire position and squeeze the trigger until the air rifle discharges.



⚠ WARNING ALWAYS WEAR EYE AND EAR PROTECTION WHEN USING AN AIRGUN.

HAMMER DECOCK

To decock the hammer, pull and hold bolt handle, remove the magazine from the slot, squeeze the trigger slowly to decock the hammer spring while holding the cocking handle.

⚠ WARNING DO NOT MOVE THE SAFETY TO THE FIRE POSITION UNLESS THE AIR GUN IS POINTED IN A SAFE DIRECTION. PRACTICE SAFE AND RESPONSIBLE GUN HANDLING PRACTICES.

AFTER DECOCKING THE HAMMER, ALWAYS TO DRY FIRE THE AIR RIFLE IN A SAFE DIRECTION TO ENSURE THE BREECH IS CLEAR.

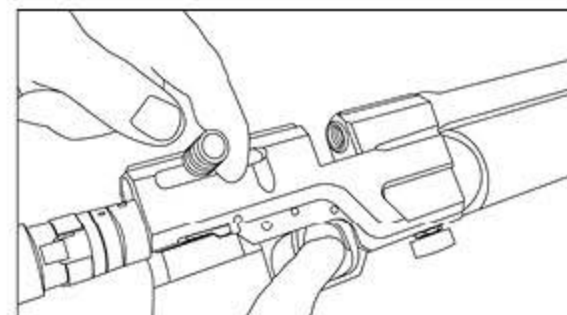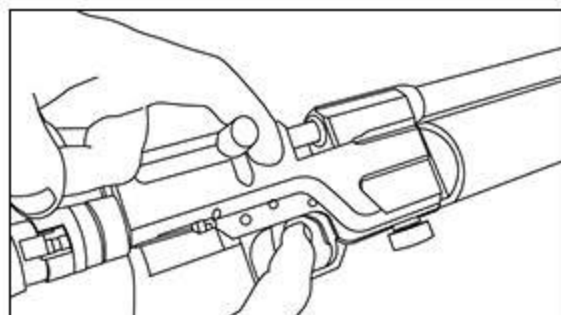

OPERATIONAL NOTICES

Modification, disassembling or removing any of the safety parts can disable the rifle and will void the warranty and will create a hazardous condition.

MODIFICATIONS TO THE VALVE

The valve in the air rifle is not a user-maintainable item. Any attempt to remove or modify the valve in any way will void the warranty and may create a hazardous condition. Filling the air tank with a gas other than dry compressed air is not recommended and will void the warranty.

CLEANING THE BARREL

An airgun barrel needs standard maintenance. If you do clean the barrel, use a good quality bore brush of the correct size, and use a non-jointed cleaning rod if possible. Do not use cleaning solvents and agents formulated for firearms because they can damage the seals and D-rings, use silicon cleaning lubricants and cleaning products.

⚠ WARNING THIS RIFLE SHOULD ONLY BE DISASSEMBLED BY FACTORY-AUTHORIZED TECHNICIAN AND A FACTORY-AUTHORIZED REPAIR STATION, OR YOU WILL VOID MANUFACTURER WARRANTY AUTOMATICALLY INCLUDING ANY

MODIFICATION OR TUNING AS WELL.

MAINTENANCE OF THE AIR CYLINDER

BINTAC Airguns' air cylinder is made of 7075 aluminum alloy. The air cylinders are designed for use with dry-filtered, compressed air to fill the air cylinder. Never use other gases such as oxygen, acetylene, hydrogen, etc. Never fill the air cylinder above 310 BAR /4500 psi. The resulting damage caused by over charging the air cylinder is not covered by the manufacturer's warranty.

SHOOTING SAFETY

NEVER point the muzzle of the rifle at anything you do not intend to shoot. Practice gun safety and responsible gun ownership.

ALWAYS wear safety glasses when shooting or operating an air rifle, SAFETY FIRST!

AVOID shooting targets that will make the pellet ricochet.

Warranty Information

All BINTAC Airguns carry ONE YEAR Manufacturer Warranty against faulty workmanship and defective materials. The Manufacturer Warranty

will start automatic after you purchased an BINTAC product from the dealer. Any BINTAC airguns covered by this warranty will be repaired or replaced at the discretion of BINTAC Precision Air-guns Inc, should a defect in material or workmanship be found. Contact your dealer first. If the rifle is determined to have a defect within the warranty period, contact the warranty enter or authorized repair facility to arrange service. The warranty guarantee does not cover any damage caused by tampering with the air rifle or abuse. Normal wear parts such as O-rings and plastic magazines are not covered as well. Repairs may only be made by the Manufacturer Warranty Center or authorized repair facility. This warranty becomes invalid for any gun that is disassemble or modified in any way not specifically authorized by BINTAC Precision Airguns Manufacturer. This warrant also becomes invalid for any gun that has ben damaged by abuse or improper handling.

A ONE YEAR manufacturer's warranty applies in those instances for all BINTAC airguns.

Official website: www.bintacllc.com

Email: bintacllc@gmail.com

Photographs, drawings, descriptions, and other information are purely indicative. BINTAC Precision Airguns reserves the right to change, modify, or discontinue products or features at any time.

